

Instructions For Use

Hand-Washing

Wash containers, lids, and paddle in warm, soapy water. Thoroughly rinse and air-dry all parts.

Dishwasher

All parts, except for the motor base, are top rack dishwasher safe. Do not wash any part in the bottom rack of the dishwasher.

Motor Base

- Unplug the motor base before cleaning. Wipe motor base with a clean, damp cloth. **DO NOT** use abrasive cloths, pads, or brushes to clean the base. Using a damp cloth, wipe the spindle below the control panel after each use.
- If liquid is trapped between the motor base and the platform, raise the platform to clean. Place the outer bowl onto the motor base with the handle centered below the control panel. Twist the handle to the right to raise the platform and lock the bowl in place. Then use a damp cloth to clean the area between the base and the raised platform.

Outer Bowl Lid

- Remove the paddle before cleaning the outer bowl lid as ingredients may be stuck under the paddle. Then run warm water through the paddle release lever and out the drain holes on either side. Position the lid with the lever side down to fully drain the lid.
- Remove the dark grey rubber lip seal wrapped around the middle of the underside of the outer bowl lid. Then hand wash the lid and seal with warm, soapy water or place in the dishwasher.