

## BATTERIES INSTALLMENT:

For further batteries removal be sure that ribbon stays underneath. Replace batteries if the foam starts to be whipped badly. The more often you change them, the faster and better foam will be done with the milk frother.

