



Grandstream Networks, Inc.

HT812/HT814

Analog Telephone Adaptors

User Guide



COPYRIGHT

©2019 Grandstream Networks, Inc. <http://www.grandstream.com>

All rights reserved. Information in this document is subject to change without notice. Reproduction or transmittal of the entire or any part, in any form or by any means, electronic or print, for any purpose without the express written permission of Grandstream Networks, Inc. is not permitted.

The latest electronic version of this user manual is available for download here:

<http://www.grandstream.com/support>

Grandstream is a registered trademark and Grandstream logo is trademark of Grandstream Networks, Inc. in the United States, Europe and other countries.

CAUTION

Changes or modifications to this product not expressly approved by Grandstream, or operation of this product in any way other than as detailed by this User Manual, could void your manufacturer warranty.

WARNING

Please do not use a different power adaptor with your devices as it may cause damage to the products and void the manufacturer warranty.



GNU GPL INFORMATION

The firmware for the HT812/HT814 contains third-party software licensed under the GNU General Public License (GPL). Grandstream uses software under the specific terms of the GPL. Please see the GNU General Public License (GPL) for the exact terms and conditions of the license.

Grandstream GNU GPL related source code can be downloaded from Grandstream web site from:
<http://www.grandstream.com/support/faq/gnu-general-public-license/gnu-gpl-information-download>



Table of Content

DOCUMENT PURPOSE	7
CHANGE LOG	8
Firmware Version 1.0.11.6	8
Firmware Version 1.0.10.6	8
Firmware Version 1.0.9.3	8
Firmware Version 1.0.8.7	8
Firmware Version 1.0.5.11	8
Firmware Version 1.0.3.7	8
Firmware Version 1.0.3.2	8
Firmware Version 1.0.2.7	8
Firmware Version 1.0.2.3	9
Firmware Version 1.0.2.1	9
GUI INTERFACE EXAMPLES	10
WELCOME	11
PRODUCT OVERVIEW	12
Feature Highlights	12
HT812/HT814 Technical Specifications	13
GETTING STARTED	15
Equipment Packaging	15
HT812/HT814 Ports Description	16
Connecting HT812/HT814	16
Scenario 1: Connecting the HT812/HT814 using WAN Port	16
Scenario 2: Connecting the HT812/HT814 using LAN Port	17
HT812/HT814 LEDs Pattern	17
CONFIGURATION GUIDE	19



Obtain HT812/HT814 IP Address via Connected Analogue phone	19
Understanding HT812/HT814 Interactive Voice Prompt Response Menu	19
Configuration via Web Browser	21
<i>Accessing the Web UI</i>	21
<i>Web UI Access Level Management</i>	22
<i>Saving the Configuration Changes</i>	22
<i>Changing Admin Level Password</i>	23
<i>Changing User Level Password</i>	23
<i>Changing Viewer Password</i>	23
<i>Changing HTTP Web Port</i>	24
Configuring HT812/HT814 Through Voice Prompts	24
Register a SIP Account	25
Rebooting HT812/HT814 from Remote	27
CALL FEATURES.....	28
CALL OPERATIONS	30
Placing a Phone Call.....	30
Direct IP Calls	30
Call Hold	31
Call Waiting	31
Call Transfer.....	31
<i>Blind Transfer</i>	31
<i>Attended Transfer</i>	31
3-Way conferencing	32
Call Return	32
Voice Mail.....	32
<i>VM Notification</i>	32
<i>Accessing VM</i>	33
Flash Digit Control	33
NAT SETTINGS	34



DTMF Methods	35
Preferred Vocoder (Codec).....	35
UPGRADING AND PROVISIONING	36
Firmware Upgrade procedure.....	36
Upgrading via Local Directory.....	37
Upgrading via Local TFTP/HTTP/HTTPS/FTP/FTPS Servers	37
Firmware and Configuration File Prefix and Postfix	37
Managing Firmware and Configuration File Download.....	38
Configuration File Download.....	38
RESTORE FACTORY DEFAULT SETTINGS	39
Using the Reset Button.....	39
Using the IVR Command	39
EXPERIENCING HT812/HT814.....	41



Table of Tables

Table 1: HT812/HT814 Features at a Glance	12
Table 2: HT812/HT814 Technical Specifications.....	13
Table 3: Definition of the HT812/HT814 Connectors	16
Table 4: HT812/HT814 LEDs Pattern Description	18
Table 5: Voice Prompt Menu	19
Table 6: HT812/HT814 Call Features	28
Table 7: MAC Address Key Mapping	39

Table of Figures

Figure 1: HT812 Package Contents.....	15
Figure 2: HT814 Package Contents.....	15
Figure 3: HT812 Back Panel	16
Figure 4: HT814 Back Panel	16
Figure 5: Connecting the HT812/HT814	17
Figure 6: HT812/HT814 LEDs Pattern.....	17
Figure 7: Admin Level Password	23
Figure 8: User Level Password	23
Figure 9: Viewer Level Password.....	24
Figure 10: Web HTTP Port.....	24
Figure 11: SIP Profiles Settings	26
Figure 12: SIP Accounts settings	26
Figure 13: Accounts Status	27
Figure 14: Firmware Upgrade Page.....	36



DOCUMENT PURPOSE

This document describes the basic concept and tasks necessary to use and configure your HT812/HT814. And it covers the topic of connecting and configuring the HT812/HT814, making basic operations and the call features. Please visit <http://www.grandstream.com/support> to download the latest “HT812/HT814 Administration Guide” to have more visibility about the configurable settings of your Handy Tones.

This guide covers following topics:

- [Product overview.](#)
- [Getting started.](#)
- [Configuration guide.](#)
- [Call features.](#)
- [Call operations.](#)
- [Upgrading and provisioning.](#)
- [Restore factory default settings.](#)



CHANGE LOG

This section documents significant changes from previous versions of user guide for HT812/HT814. Only major new features or major document updates are listed here. Minor updates for corrections or editing are not documented here.

Firmware Version 1.0.11.6

- No major changes.

Firmware Version 1.0.10.6

- Added support for G722 Codec. [HT812/HT814 Technical Specifications]
- Added support for Spanish language in Web UI.

Firmware Version 1.0.9.3

- No major changes

Firmware Version 1.0.8.7

- Added support for Hunting Group on HT812 Web UI.
- Added support for upgrade device via FTP/FTPS server. [UPGRADING AND PROVISIONING]
- Added support for Russian language in Web UI and IVR.

Firmware Version 1.0.5.11

- Changed default "Upgrade Via" from HTTP to HTTPS. [Upgrade Protocol] [UPGRADE PROTOCOL] [UPGRADING AND PROVISIONING]
- Added support for 3 level access through RADIUS authorization (Admin, User and viewer).

Firmware Version 1.0.3.7

- No major changes

Firmware Version 1.0.3.2

- No major changes

Firmware Version 1.0.2.7

- No major changes



Firmware Version 1.0.2.3

- Added network check mechanism to enable or disable WAN port web access.

Firmware Version 1.0.2.1

- This is the initial version for HT812/HT814.



GUI INTERFACE EXAMPLES

http://www.grandstream.com/sites/default/files/Resources/HT81x_web_gui.zip

1. Screenshot of Login Page.
2. Screenshots of Status Page.
3. Screenshots of Basic Settings Page.
4. Screenshots of Advanced Settings Page.
5. Screenshots of Profile Page.
6. Screenshots of FXS Port Page.



WELCOME

The HT812/HT814 analog telephone adapters provides transparent connectivity for analog phones and faxes to the world of internet voice. Connecting to any analog phone, fax or PBX, the HT812/HT814 are an effective and flexible solution for accessing internet-based telephone services and corporate intranet systems across established LAN and internet connections. The Grandstream Handy Tones HT812/HT814 are a new addition to the popular Handy Tone ATA products family. This manual will help you learn how to operate and manage your HT812/HT814 analog telephone adaptors and make the best use of its many upgraded features including simple and quick installation, 3-way conferencing, direct IP-IP Calling, and new provisioning support among other features. This HT812/HT814 are very easy to manage and configure, and specifically designed to be an easy to use and affordable VoIP solution for both the residential user and the teleworker.



PRODUCT OVERVIEW

The HT812/HT814 are 2/4 ports analog telephone adapters (ATA) that allows users to create a high-quality and manageable IP telephony solution for residential and office environments. Their ultra-compact size, voice quality, advanced VoIP functionality, security protection and auto provisioning options enable users to take advantage of VoIP on analog phones and enables service providers to offer high quality IP service. The HT812/HT814 are an ideal ATAs for individual use and for large scale commercial IP voice deployments since they permit small and medium businesses to create integrated IP and PSTN telephony systems that efficiently manage communication costs. HT812/HT814's inclusion of an integrated NAT router and dual 10/100/1000Mbps Ethernet WAN and LAN ports enables a shared broadband connection between multiple Ethernet devices as well as the extension of VoIP services to analog phones.

Feature Highlights

The following table contains the major features of the HT812/HT814:

Table 1: HT812/HT814 Features at a Glance

HT812 / HT814	<ul style="list-style-type: none">Support 2 SIP profiles through 2 FXS ports for HT812 and 4 FXS port for HT814 and dual 10/100/1000Mbps Ethernet port for HT812Support 3-way voice conferencing.Support wide range of caller ID formats.Support advanced telephony features, including call transfer, call forward, call-waiting, do not disturb, message waiting indication, multi-language prompts, flexible dial plan and more.Support T.38 Fax for creating Fax-over-IP.TLS and SRTP security encryption technology to protect calls and accounts.Automated provisioning options include TR-069 and XML config files.Failover SIP server automatically switches to secondary server if main server loses connection.Use with Grandstream's UCM series of IP PBXs for Zero Configuration provisioning.GR-909 Line Testing Functionalities.
---------------	---



HT812/HT814 Technical Specifications

The following table resumes all the technical specifications including the protocols/standards supported, voice codecs, telephony features, languages and upgrade/provisioning settings for the HT812/HT814.

Table 2: HT812/HT814 Technical Specifications

Interfaces	
Telephone Interfaces	Two (2) RJ11 FXS ports for HT812. Four (4) RJ11 FXS ports for HT814.
Network Interface	Two (2) 10/100/1000 Mbps Ethernet port (RJ45).
LED Indicators	POWER, LAN, WAN, PHONE1, PHONE2 for HT812. POWER, LAN, WAN, PHONE1, PHONE2, PHONE3, PHONE4 for HT814.
Factory Reset Button	Yes.
Voice, Fax, Modem	
Telephony Features	Caller ID display or block, call waiting, flash, blind or attended transfer, forward, hold, do not disturb, 3-way conference.
Voice Codecs	G.711 with Annex I (PLC) and Annex II (VAD/CNG), G.723.1, G.729A/B, G.726, iLBC, OPUS, G722, dynamic jitter buffer, advanced line echo cancellation.
Fax over IP	T.38 compliant Group 3 Fax Relay up to 14.4kpbs and auto-switch to G.711 for Fax Pass-through.
Short/Long Haul Ring Load	For HT812: 3 REN, up to 1km on 24AWG line. For HT814: 2 REN, up to 1km on 24AWG line.
Caller ID	Bellcore Type 1 & 2, ETSI, BT, NTT, and DTMF-based CID.
Disconnect Methods	Busy Tone, Polarity Reversal/Wink, Loop Current.
Signaling	
Network Protocols	TCP/IP/UDP, RTP/RTCP, HTTP/HTTPS, FTP/FTPS, ARP/RARP, ICMP, DNS, DDNS, DHCP, NTP, TFTP, SSH, Telnet, STUN, SIP (RFC3261), SIP over TCP/TLS, SRTP, TR-069.
QoS	Layer 2 (802.1Q VLAN, SIP/RTP 802.1p) and Layer 3 (ToS, Diffserv, MPLS).
DTMF Methods	In-audio, RFC2833 and/or SIP INFO.
Provisioning and Control	FTP, FTPS, HTTP, HTTPS, SSH, Telnet, TFTP, TR-069, secure and automated provisioning using TR069, syslog.



Security	
Media	SRTP.
Control	TLS/SIPS/HTTPS/HTTP/SSH/Telnet.
Management	Syslog support, SSH, Telnet, remote management using web browser.
Physical	
Universal Power Supply	Input: 100-240VAC, 50-60Hz Output: 12V/0.5A for HT812. Output: 12V/1A for HT814.
Environmental	Operational: 32° – 104°F or 0° – 40°C. Storage: 14° – 140°F or -10° – 60°C. Humidity: 10 – 90% Non-condensing.
Dimensions and Weight	Dimension: 28.5 x 130 x 90 mm (H x W x D). Weight: 353.33g for HT812 and for 423.5g for HT814.
Compliance	
Compliance	FCC/CE/RCM.



GETTING STARTED

This chapter provides basic installation instructions including the list of the packaging contents and also information for obtaining the best performance with the HT812/HT814.

Equipment Packaging

The HT812/HT814 ATAs packages contains:

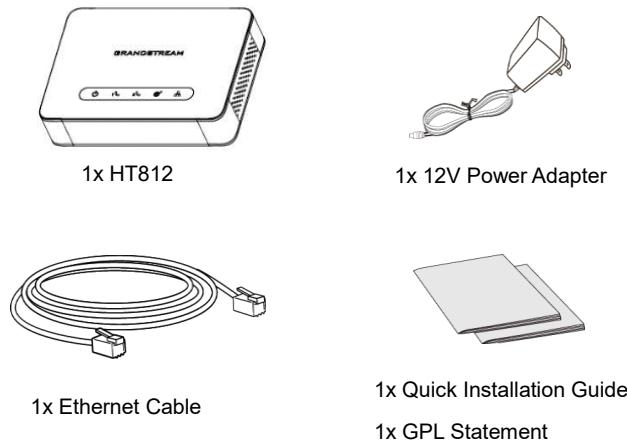


Figure 1: HT812 Package Contents

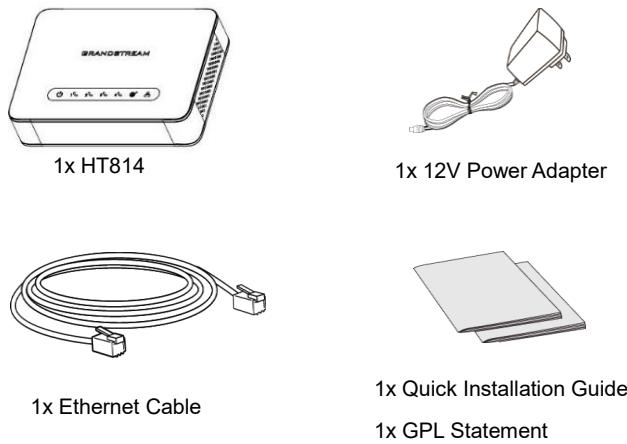


Figure 2: HT814 Package Contents

Note: Check the package before installation. If you find anything missing, contact your system administrator.



HT812/HT814 Ports Description

The following figure describes the different ports on the back panel of the HT812/HT814.

 


Figure 3: HT812 Back Panel

 


Figure 4: HT814 Back Panel

Table 3: Definition of the HT812/HT814 Connectors

Phone 1 & 2 (HT812) Phone 1,2,3 & 4 (HT814)	Connects the analog phones / fax machines to the ATA using an RJ-11 telephone cable.
WAN 	Connects the ATA to your router, switch or modem using an Ethernet RJ45 network cable.
LAN 	Connects the ATA to your PC or switch using an Ethernet RJ45 network cable.
DC Power	Connects the ATA to PSU (12V – 0.5A for HT812) and (12V - 1A for HT814).
Reset	Factory reset button. Press for 7 seconds to reset factory default

Connecting HT812/HT814

The HT812/HT814 are designed for easy configuration and installation. To connect your HT812/HT814, please follow the steps below:

Scenario 1: Connecting the HT812/HT814 using WAN Port

When connecting HT812/HT814 using the WAN port, they will act as simple DHCP Client.

1. Insert a standard RJ11 telephone cable into the phone ports and connect the other end of the telephone cable to a standard touch-tone analog telephone.
2. Connect the WAN port of the HT812/HT814 to a router, switch or modem using an Ethernet cable.
3. Insert the power adapter into the HT812/HT814 and connect it to a wall outlet and make sure to respect the technical specifications of the power adapter used.
4. Power, WAN and Phone LEDs will be solidly lit when the HT812/HT814 is ready for use.



Scenario 2: Connecting the HT812/HT814 using LAN Port

When connecting the HT812/HT814 using the LAN port, they will act as a router and DHCP serving addresses, the devices connected with HT812/HT814 LAN will pull DHCP addresses from your HT812/HT814.

1. Insert a standard RJ11 telephone cable into the phone ports and connect the other end of the telephone cable to a standard touch-tone analog telephone.
2. Connect a computer or switch to the LAN port of the HT812/HT814 using an Ethernet Cable.
3. Insert the power adapter into the HT812/HT814 and connect it to a wall outlet and make sure to respect the technical specifications of the power adapter used.
4. Power, LAN and Phone LEDs will be solidly lit when the HT812/HT814 is ready for use.

Note: Please make sure to enable NAT Router under Web GUI → Basic Settings → Device Mode.

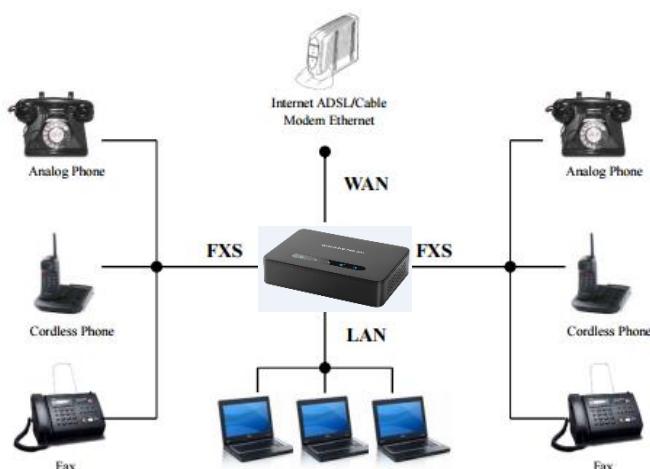


Figure 5: Connecting the HT812/HT814

HT812/HT814 LEDs Pattern

There are four (4) LED types that help you manage the status of your HT812/HT814.



Figure 6: HT812/HT814 LEDs Pattern



Table 4: HT812/HT814 LEDs Pattern Description

LED Lights	Status
Power LED	The Power LED lights up when the HT812/HT814 are powered on and it flashes when the HT812/HT814 is booting up
WAN LED	The WAN LED lights up when the HT812/HT814 are connected to your network through the WAN port.
LAN LED	The LAN LED lights up when the HT812/HT814 are connected to your network through the LAN port.
Phone LED 1&2 (HT812) Phone LED 1,2,3 & 4 (HT814)	<p>The phone LED 1 & 2 indicates status of the respective FXS port-phone on the back panel</p> <ul style="list-style-type: none"> • OFF - Unregistered • ON (Solid Blue) - Registered and Available • Blinking every 500 ms - Off-Hook / Busy • Slow blinking - FXS LEDs indicates voicemail



CONFIGURATION GUIDE

The HT812/HT814 can be configured via one of two ways:

- The IVR voice prompt menu.
- The Web GUI embedded on the HT812/HT814 using PC's web browser.

Obtain HT812/HT814 IP Address via Connected Analogue phone

HT812/HT814 are by default configured to obtain the IP address from DHCP server where the unit is located.

In order to know which IP address is assigned to your HT812/HT814, you should access to the "[Interactive Voice Response Menu](#)" of your adapter via the connected phone and check its IP address mode.

Please refer to the steps below to access the interactive voice response menu:

1. Use a telephone connected to phone ports of your HT812/HT814.
2. Press *** (press the star key three times) to access the IVR menu and wait until you hear "Enter the menu option".
3. Press 02 and the current IP address will be announced.

Understanding HT812/HT814 Interactive Voice Prompt Response Menu

The HT812/HT814 have a built-in voice prompt menu for simple device configuration which lists actions, commands, menu choices, and descriptions. The IVR menu works with any phone connected to the HT812/HT814. Pick up the handset and dial "****" to use the IVR menu.

Table 5: Voice Prompt Menu

Menu	Voice Prompt	Options
Main Menu	"Enter a Menu Option"	Press "*" for the next menu option Press "#" to return to the main menu Enter 01-05, 07,10, 12-17,47 or 99 menu options
01	"DHCP Mode", "Static IP Mode" "PPPoE Mode"	Press "9" to toggle the selection If using "Static IP Mode", configure the IP address information using menus 02 to 05. If using "Dynamic IP Mode", all IP address information comes from the DHCP server automatically after reboot. If using "PPPoE Mode", configure PPPoE Username and Password from web GUI to get IP from your ISP.
02	"IP Address " + IP address	The current WAN IP address is announced If using "Static IP Mode", enter 12-digit new IP address. You need to reboot your HT812/HT814 for the new IP address to take Effect.
03	"Subnet " + IP address	Same as menu 02



04	“Gateway “ + IP address	Same as menu 02
05	“DNS Server “ + IP address	Same as menu 02
07	Preferred Vocoder	<p>Press “9” to move to the next selection in the list:</p> <ul style="list-style-type: none"> PCM U / PCM A iLBC G-726 G-723 G-729 OPUS G-722
10	“MAC Address”	<p>Announces the MAC address of the unit.</p> <p>Note: The device has two MAC addresses. One for the WAN port and one for the LAN port. The device MAC address announced is the address of LAN port.</p>
12	WAN Port Web Access	<p>Press “9” to toggle between enable/disable.</p> <p>Default is disabled.</p>
13	Firmware Server IP Address	Announces current Firmware Server IP address. Enter 12-digit new IP address.
14	Configuration Server IP Address	Announces current Config Server Path IP address. Enter 12-digit new IP address.
15	Upgrade Protocol	Upgrade protocol for firmware and configuration update. Press “9” to toggle between TFTP / HTTP / HTTPS/ FTP/FTPS . Default is HTTPS.
16	Firmware Version	Announces Firmware version information.
17	Firmware Upgrade	<p>Firmware upgrade mode. Press “9” to toggle among the following three options:</p> <ul style="list-style-type: none"> Always check Check when pre/suffix changes Never upgrade
47	“Direct IP Calling”	Enter the target IP address to make a direct IP call, after dial tone. (See “ <i>Make a Direct IP Call</i> ”.)
86	Voice Mail	Access to your voice mails messages.
99	“RESET”	<p>Press “9” to reboot the device.</p> <p>Enter MAC address to restore factory default setting (See Restore Factory Default Setting section)</p>
	“Invalid Entry”	Automatically returns to main menu
	“Device not registered”	This prompt will be played immediately after off hook If the device is not register and the option Outgoing Call without Registration is in NO



Five success tips when using the voice prompt

- “**” shifts down to the next menu option and “#” returns to the main menu
- “9” functions as the ENTER key in many cases to confirm or toggle an option.
- All entered digit sequences have known lengths - 2 digits for menu option and 12 digits for IP address. For IP address, add 0 before the digits if the digits are less than 3 (i.e. - 192.168.0.26 should be key in like 192168000026. No decimal is needed).
- Key entry cannot be deleted but the phone may prompt error once it is detected.

Note: Please make sure to reboot the device after changing network settings (IP Address, Gateway, Subnet...) to apply the new configuration.

Configuration via Web Browser

The HT812/HT814 embedded Web server responds to HTTP GET/POST requests. Embedded HTML pages allow a user to configure the HT812/HT814 through a web browser such as Google Chrome, Mozilla Firefox and Microsoft's IE.

- **Microsoft Internet Explorer:** version 10 or higher.
- **Google Chrome:** version 58.0.3 or higher.
- **Mozilla Firefox:** version 53.0.2 or higher.
- **Safari:** version 5.1.4 or higher.
- **Opera:** version 44.0.2 or higher.

Accessing the Web UI

- Via WAN port

For the initial setup, the Web access is by default enabled when the device is using private IP and disabled when using public IP, and you cannot access the Web UI of your HT812/HT814 until it's enabled, the following steps will show you how to enable it via IVR.

1. Power your HT812/HT814 using PSU with the right specifications.
2. Connect your analog phone to phone ports (FXS) of your HT812/HT814.
3. Press *** (press the star key three times) to access the IVR menu and wait until you hear “Enter the menu option “.
4. Press 12, the IVR menu will announce that the web access is disabled, press 9 to enable it.
5. Reboot your HT812/HT814 to apply the new settings.

Please refer to steps below if your HT812/HT814 is connected via WAN port:

1. You may check your HT812/HT814 IP address using the IVR on the connected phone.

Please see [Obtain the HT812/HT814 IP address via the connected analogue phone](#)



2. Open the web browser on your computer.
3. Enter the HT812/HT814's IP address in the address bar of the browser.
4. Enter the administrator's password to access the Web Configuration Menu.

Note: The computer must be connected to the same sub-network as the HT812/HT814. This can be easily done by connecting the computer to the same hub or switch as the HT812/HT814.

- **Via LAN port**

Please refer to steps below if your HT812/HT814 is connected via LAN port:

1. Power your HT812/HT814 using PSU with the right specifications.
2. Connect your computer or switch directly to your HT812/HT814 LAN port.
3. Open the web browser on your computer.
4. Enter the default LAN IP address (192.168.2.1) in the address bar of the browser.
5. Enter the administrator's password to access the Web Configuration Menu.
6. Make sure to reboot your device after changing your settings to apply the new configuration.

Note: Please make sure that your computer has a valid IP address on the range 192.168.2.x so you can access the web GUI of your HT812/HT814.

Web UI Access Level Management

There are two default passwords for the login page:

User Level	Password	Web Pages Allowed
End User Level	123	Only Status and Basic Settings
Administrator Level	admin	All pages
Viewer Level	viewer	Only checking. Not allowed to modify content.

The password is case sensitive with maximum length of 25 characters.

When changing any settings, always submit them by pressing **Update** or **Apply** button on the bottom of the page. After submitting the changes in all the Web GUI pages, if a reboot is required, the web page will prompt the user to reboot by offering a reboot button on the web page.


Saving the Configuration Changes

After users make changes to the configuration, pressing **Update** button will save but not apply the changes until **Apply** button is clicked. Users can instead directly press **Apply** button. When a reboot is required to apply changes, the web page will prompt the user to reboot by offering a reboot button on the web page.



Changing Admin Level Password

1. Access your HT812/HT814 web UI by entering its IP address in your favorite browser.
2. Enter your admin password (default: admin).
3. Press **Login** to access your settings.
4. Go to **Advanced Settings → New Admin Password** and enter the new admin password.
5. Confirm the new admin password.
6. Press **Apply** at the bottom of the page to save your new settings.

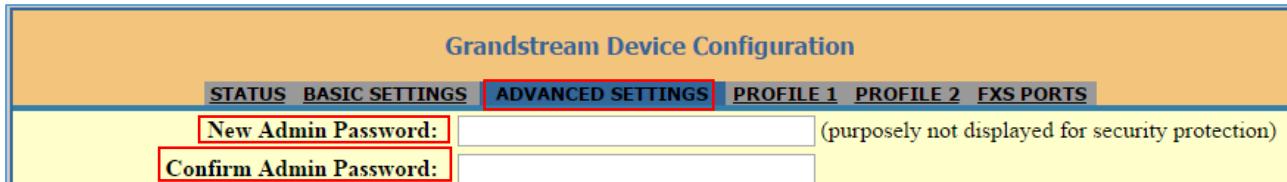


Grandstream Device Configuration

STATUS	BASIC SETTINGS	ADVANCED SETTINGS	PROFILE 1	PROFILE 2	FXS PORTS
New Admin Password:	<input type="text"/>		(purposely not displayed for security protection)		
Confirm Admin Password:	<input type="text"/>				

Figure 7: Admin Level Password

Changing User Level Password

1. Access your HT812/HT814 web UI by entering its IP address in your favorite browser.
2. Enter your admin password (default: admin).
3. Press **Login** to access your settings.
4. Go to **Basic Settings → New End User Password** and enter the new end-user password.
5. Confirm the new end-user password.
6. Press **Apply** at the bottom of the page to save your new settings.

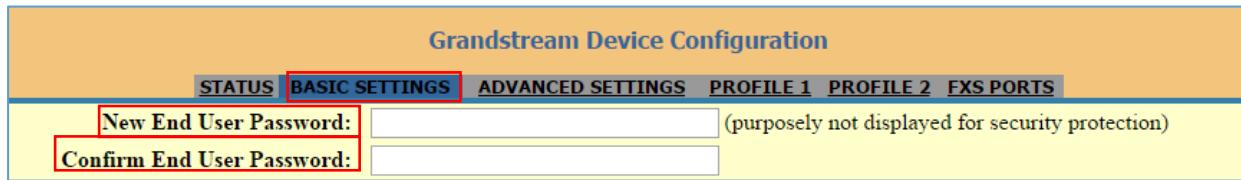

Grandstream Device Configuration

STATUS	BASIC SETTINGS	ADVANCED SETTINGS	PROFILE 1	PROFILE 2	FXS PORTS
New End User Password:	<input type="text"/>		(purposely not displayed for security protection)		
Confirm End User Password:	<input type="text"/>				

Figure 8: User Level Password

Changing Viewer Password

1. Access your HT812/HT814 web UI by entering its IP address in your favorite browser.
2. Enter your admin password (default: admin).
3. Press **Login** to access your settings.
4. Go to **Basic Settings → New Viewer Password** and enter the new viewer password.
5. Confirm the new viewer password.
6. Press **Apply** at the bottom of the page to save your new settings.



Grandstream Device Configuration

STATUS	BASIC SETTINGS	ADVANCED SETTINGS	PROFILE 1	PROFILE 2	FXS PORTS
New End User Password: <input type="text"/> (purposely not displayed for security protection) Confirm End User Password: <input type="text"/> New Viewer Password: <input type="text"/> (purposely not displayed for security protection) Confirm Viewer Password: <input type="text"/>					

Figure 9: Viewer Level Password

Changing HTTP Web Port

1. Access your HT812/HT814 web UI by entering its IP address in your favorite browser.
2. Enter your admin password (default: admin).
3. Press **Login** to access your settings.
4. Go to **Basic Settings → HTTP Web Port**.
5. Make sure that the **Web Access Mode** is set to **HTTP**.
6. Change the current port to your desired/new HTTP port. Ports accepted are in range [1-65535].
7. Press **Apply** at the bottom of the page to save your new settings

Grandstream Device Configuration

STATUS	BASIC SETTINGS	ADVANCED SETTINGS	PROFILE 1	PROFILE 2	FXS PORTS
New End User Password: <input type="text"/> (purposely not displayed for security protection) Confirm End User Password: <input type="text"/> New Viewer Password: <input type="text"/> (purposely not displayed for security protection) Confirm Viewer Password: <input type="text"/>					
Web/SSH Access: Web Session Timeout: <input type="text" value="10"/> (1-60, default 10 minutes.) Web Access Attempt Limit: <input type="text" value="5"/> (1-10, default 5.) Web Lockout Duration: <input type="text" value="15"/> (0-60, default 15 minutes.)					
Web Access Mode: <input type="radio"/> HTTPS <input checked="" type="radio"/> HTTP HTTP Web Port: <input type="text" value="80"/> (default is 80) HTTPS Web Port: <input type="text" value="443"/> (default is 443)					

Figure 10: Web HTTP Port

Configuring HT812/HT814 Through Voice Prompts

As mentioned previously, The HT812/HT814 has a built-in voice prompt menu for simple device configuration. Please refer to "[Understanding HT812/HT814 Interactive Voice Prompt Response Menu](#)" for more information about IVR and how to access its menu.



- **DHCP MODE**

Select voice menu option 01 to allow the HT812/HT814 to use DHCP.

- **STATIC IP MODE**

Select voice menu option 01 to allow the HT812/HT814 to enable the STATIC IP mode, then use option 02, 03, 04, 05 to set up IP address, Subnet Mask, Gateway and DNS server respectively.

- **PPPOE MODE**

Select voice menu option 01 to allow the HT812/HT814 to enable the PPPoE mode. PPPoE Username and Password should be configured from web GUI.

- **FIRMWARE SERVER IP ADDRESS**

Select voice menu option 13 to configure the IP address of the firmware server.

- **CONFIGURATION SERVER IP ADDRESS**

Select voice menu option 14 to configure the IP address of the configuration server.

- **UPGRADE PROTOCOL**

Select the menu option 15 to choose firmware and configuration upgrade protocol between TFTP, FTP, FTPS, HTTP and HTTPS. Default is HTTPS.

- **FIRMWARE UPGRADE MODE**

Select voice menu option 17 to choose firmware upgrade mode among the following three options: "Always check, check when pre/suffix changes, and never upgrade".

- **WAN PORT WEB ACCESS**

Select voice menu option 12 to enable/disable web access from WAN port. Press 9 in this menu to toggle between enable / disable.

Register a SIP Account

The HT812/HT814 support 2 profiles which can be configured with 2 SIP accounts. Please refer to the following steps in order to register your accounts via web user interface

1. Access your HT812/HT814 web UI by entering its IP address in your favorite browser.
2. Enter your admin password (default: admin).
3. Press **Login** to access your settings.
4. Go to **Profile (1 or 2)** pages.
5. In **Profile** tab, set the following:
 - a. **Account Active** to **Yes**.
 - b. **Primary SIP Server** field with your SIP server IP address or FQDN.
 - c. **Failover SIP Server** with your Failover SIP Server IP address or FQDN. Leave empty if not available.



- d. **Prefer Primary SIP Server** to **No** or **Yes** depending on your configuration. Set to **No** if no Failover SIP Server is defined. If **“Yes”**, account will register to Primary SIP Server when failover registration expires.
- e. **Outbound Proxy:** Set your Outbound Proxy IP Address or FQDN. Leave empty if not available.

6. After configuring the SIP server and activating the profiles, you should access to **FXS Ports** page to register your accounts. In **FXS Ports** tab, set the following:

- a. **SIP User ID:** User account information, provided by VoIP service provider (ITSP). Usually in the form of digit similar to phone number or actually a phone number.
- b. **Authenticate ID:** SIP service subscriber's Authenticate ID used for authentication. Can be identical to or different from SIP User ID.
- c. **Authenticate Password:** SIP service subscriber's account password to register to SIP server of ITSP. For security reasons, the password field will be shown as empty.
- d. **Name:** Any name to identify this specific user.
- e. Set **Enable Port** to **Yes**.

7. Press **Apply** at the bottom of the page to save your configuration.

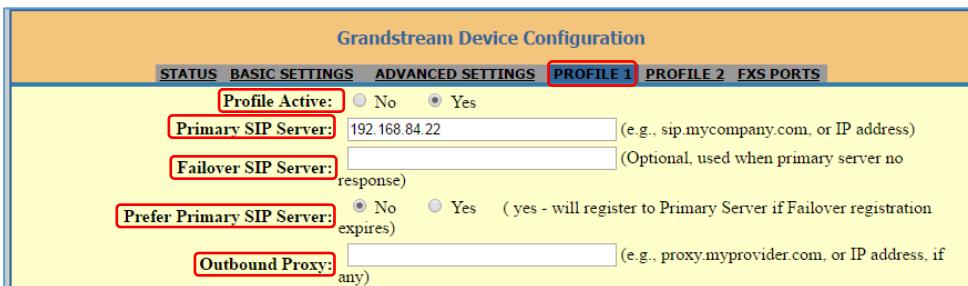


Figure 11: SIP Profiles Settings

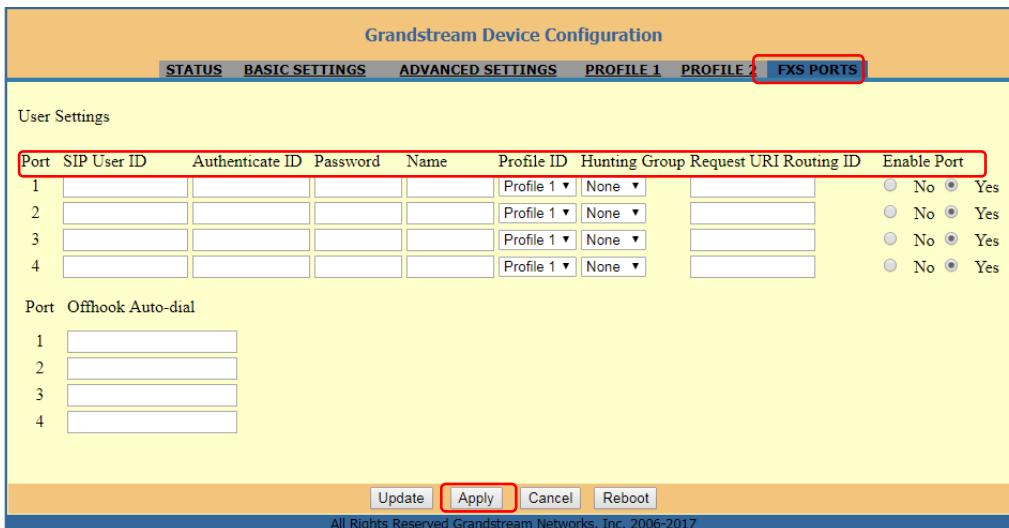


Figure 12: SIP Accounts settings



After applying your configuration, your account will register to your SIP Server, you can verify if it has been correctly registered with your SIP server from your HT812/HT814 web interface under **Status → Port Status → Registration** (If it displays **Registered**, it means that your account is fully registered, otherwise it will display **Not Registered** so in this case you must double check the settings or contact your provider).

Grandstream Device Configuration

STATUS	BASIC SETTINGS	ADVANCED SETTINGS	PROFILE 1	PROFILE 2	FXS PORTS																									
MAC Address:	WAN-- 00:0B:82:A3:38:FD	LAN-- 00:0B:82:A3:38:FC (Device MAC)																												
WAN IPv4 Address:	192.168.6.206																													
WAN IPv6 Address:																														
Product Model:	HT814																													
Hardware Version:	V1.6A Part Number -- 9610004916A																													
Software Version:	Program -- 1.0.5.11 Bootloader -- 1.0.5.3 Core -- 1.0.5.3 Base -- 1.0.5.11 CPE -- 1.0.1.67																													
Software Status:	Running Mem: 23808																													
System Up Time:	09:10:03 up 1:08																													
PPPoE Link Up:	Disabled																													
NAT:	Unknown NAT																													
Port Status:	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th>Port</th> <th>Hook</th> <th>User ID</th> <th>Registration</th> </tr> <tr> <td>FXS 1</td> <td>On Hook</td> <td>001</td> <td>Registered</td> </tr> <tr> <td>FXS 2</td> <td>On Hook</td> <td></td> <td>Not Registered</td> </tr> <tr> <td>FXS 3</td> <td>On Hook</td> <td></td> <td>Not Registered</td> </tr> <tr> <td>FXS 4</td> <td>On Hook</td> <td></td> <td>Not Registered</td> </tr> </table>					Port	Hook	User ID	Registration	FXS 1	On Hook	001	Registered	FXS 2	On Hook		Not Registered	FXS 3	On Hook		Not Registered	FXS 4	On Hook		Not Registered					
Port	Hook	User ID	Registration																											
FXS 1	On Hook	001	Registered																											
FXS 2	On Hook		Not Registered																											
FXS 3	On Hook		Not Registered																											
FXS 4	On Hook		Not Registered																											
Port Options:	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th>Port</th> <th>DND</th> <th>Forward</th> <th>Busy Forward</th> <th>Delayed Forward</th> </tr> <tr> <td>FXS 1</td> <td>No</td> <td></td> <td></td> <td></td> </tr> <tr> <td>FXS 2</td> <td>No</td> <td></td> <td></td> <td></td> </tr> <tr> <td>FXS 3</td> <td>No</td> <td></td> <td></td> <td></td> </tr> <tr> <td>FXS 4</td> <td>No</td> <td></td> <td></td> <td></td> </tr> </table>					Port	DND	Forward	Busy Forward	Delayed Forward	FXS 1	No				FXS 2	No				FXS 3	No				FXS 4	No			
Port	DND	Forward	Busy Forward	Delayed Forward																										
FXS 1	No																													
FXS 2	No																													
FXS 3	No																													
FXS 4	No																													
Provision:	Not running, Last status : Downloading file from url.																													
Core Dump:	Clean																													

All Rights Reserved Grandstream Networks, Inc. 2006-2017

Figure 13: Accounts Status

Note: When all the FXS ports are registered, the simultaneous ring will have one second delay between each ring on each phone.

Rebooting HT812/HT814 from Remote

Press the “Reboot” button at the bottom of the configuration menu to reboot the ATA remotely. The web browser will then display a message window to confirm that reboot is underway. Wait 30 seconds to log in again.



CALL FEATURES

The HT812/HT814 support all the traditional and advanced telephony features.

Table 6: HT812/HT814 Call Features

Key	Call features
*02	Forcing a Codec (per call) *027110 (PCMU), *027111 (PCMA), *02723 (G723), *02729 (G729), *027201 (iLBC).
*03	Disable LEC (per call) Dial “*03” +” number”. No dial tone is played in the middle.
*16	Enable SRTP
*17	Disable SRTP
*30	Block Caller ID (for all subsequent calls)
*31	Send Caller ID (for all subsequent calls)
*47	Direct IP Calling . Dial “*47” + “IP address”. No dial tone is played in the middle.
*50	Disable Call Waiting (for all subsequent calls)
*51	Enable Call Waiting (for all subsequent calls)
*67	Block Caller ID (per call) . Dial “*67” +” number”. No dial tone is played in the middle.
*82	Send Caller ID (per call) . Dial “*82” +” number”. No dial tone is played in the middle.
*69	Call Return Service : Dial *69 and the phone will dial the last incoming phone number received.
*70	Disable Call Waiting (per call) . Dial “*70” +” number”. No dial tone is played in the middle.
*71	Enable Call Waiting (per call) . Dial “*71” +” number”. No dial tone is played in the middle
*72	Unconditional Call Forward : Dial “*72” and then the forwarding number followed by “#”. Wait for dial tone and hang up. (dial tone indicates successful forward)
*73	Cancel Unconditional Call Forward . To cancel “Unconditional Call Forward”, dial “*73”, wait for dial tone, then hang up.
*74	Enable Paging Call : Dial “*74” and then the destination phone number you want to page.
*78	Enable Do Not Disturb (DND) : When enabled all incoming calls are rejected.
*79	Disable Do Not Disturb (DND) : When disabled, incoming calls are accepted.
*87	Blind Transfer



*90	Busy Call Forward: Dial “*90” and then the forwarding number followed by “#”. Wait for dial tone then hang up.
*91	Cancel Busy Call Forward. To cancel “Busy Call Forward”, dial “*91”, wait for dial tone, then hang up.
*92	Delayed Call Forward. Dial “*92” and then the forwarding number followed by “#”. Wait for dial tone then hang up.
*93	Cancel Delayed Call Forward. To cancel Delayed Call Forward, dial “*93”, wait for dial tone, then hang up
Flash/ Hook	Toggles between active call and incoming call (call waiting tone). If not in conversation, flash/hook will switch to a new channel for a new call.
#	Pressing pound sign will serve as Re-Dial key.



CALL OPERATIONS

Placing a Phone Call

To make the outgoing calls using your HT812/HT814

1. Pick up the handset of the connected phone.
2. Dial the number directly and wait for 4 seconds (Default “No Key Entry Timeout”); or
3. Dial the number directly and press # (Use # as dial key” must be configured in web configuration).

Examples:

1. Dial an extension directly on the same proxy, (e.g. 1008), and then press the # or wait for 4 seconds.
2. Dial an outside number (e.g. (626) 666-7890), first enter the prefix number (usually 1+ or international code) followed by the phone number. Press # or wait for 4 seconds. Check with your VoIP service provider for further details on prefix numbers.

Direct IP Calls

Direct IP calling allows two parties, that is, a FXS Port with an analog phone and another VoIP Device, to talk to each other in an ad hoc fashion without a SIP proxy.

Elements necessary to completing a Direct IP Call:

- Both HT812/HT814 and other VoIP Device, have public IP addresses, or
- Both HT812/HT814 and other VoIP Device are on the same LAN using private IP addresses, or
- Both HT812/HT814 and other VoIP Device can be connected through a router using public or private IP addresses (with necessary port forwarding or DMZ).

The HT812/HT814 support two ways to make Direct IP Calling:

Using IVR

1. Pick up the analog phone then access the voice menu prompt by dialing “***”
2. Dial “47” to access the direct IP call menu
3. Enter the IP address after the dial tone and voice prompt “Direct IP Calling”

Using Star Code

1. Pick up the analog phone then dial “*47”
2. Enter the target IP address.

Note: No dial tone will be played between step 1 and 2 and destination ports can be specified using “*” (encoding for “：“) followed by the port number.



Examples of Direct IP Calls:

- a) If the target IP address is 192.168.0.160, the dialing convention is ***47 or Voice Prompt with option 47, then 192*168*0*160**, followed by pressing the “#” key if it is configured as a send key or wait 4 seconds. In this case, the default destination port 5060 is used if no port is specified
- b) If the target IP address/port is 192.168.1.20:5062, then the dialing convention would be: ***47 or Voice Prompt with option 47, then 192*168*0*160*5062** followed by pressing the “#” key if it is configured as a send key or wait for 4 seconds.

Note: When completing direct IP call, the “**Use Random SIP/RTP Port**” should set to “NO”.

Call Hold

You can place a call on hold by pressing the “flash” button on the analog phone (if the phone has that button).

Press the “flash” button again to release the previously held Caller and resume conversation. If no “flash” button is available, use “hook flash” (toggle on-off hook quickly). You may drop a call using hook flash.

Call Waiting

The call waiting tone (3 short beeps) indicates an incoming call, if the call waiting feature is enabled.

To toggle between incoming call and current call, you need to press the “flash” button the first call is placed on hold.

Press the “flash” button to toggle between the active calls.

Call Transfer

Blind Transfer

Assume that the call is established between phone A and B are in conversation. The phone A wants to *blind transfer* phone B to phone C:

1. On the phone A presses FLASH to hear the dial tone.
2. The phone A dials *87 then dials caller C’s number, and then # (or wait for 4 seconds)
3. The phone A will hear the dial tone. Then, A can hang up.

Note: “Enable Call Feature” must be set to “Yes” in web configuration page.

Attended Transfer

Assume that the call is established between phone A and B are in conversation. The phone A wants to *attend transfer* phone B to phone C:

1. On the phone A presses FLASH to hear the dial tone.



2. Phone A dials the phone C's number followed by # (or wait for 4 seconds).
3. If phone C answers the call, phones A and C are in conversation. Then A can hang up to complete transfer.
4. If phone C does not answer the call, phone A can press "flash" to resume call with phone B.

Note: When attended transfer fails and A hangs up, the HT812/HT814 will ring back user A to remind A that B is still on the call. A can pick up the phone to resume conversation with B.

3-Way conferencing

The HT812/HT814 support Bellcore style 3-way Conference. To perform the 3-way conference, we assume that the call is established between phone A and B are in conversation. Phone A(HT812/HT814) wants to bring third phone C into conference:

1. Phone A presses FLASH (on the analog phone, or Hook Flash for old model phones) to get a dial tone.
2. Phone A dials C's number then # (or wait for 4 seconds).
3. If phone C answers the call, then A presses FLASH to bring B, C in the conference.
4. If phone C does not answer the call, phone A can press FLASH back to talk to phone B.
5. If phone A presses FLASH during conference, the phone C will be dropped out.
6. If phone A hangs up, the conference will be terminated for all three parties when configuration "Transfer on Conference Hang up" is set to "No". If the configuration is set to "Yes", A will transfer B to C so that B and C can continue the conversation.

Call Return

In order to call back to the latest incoming number.

1. Pick up the handset of the connected phone (Off-hook).
2. After hearing the dial tone, input "*69".
3. Your phone will automatically call back to the latest incoming number.

Note: All star codes (*XX) related features mentioned above are supported by ATA default settings. If your service provider provides different feature codes, please contact them for instructions.

Voice Mail

VM Notification

The HT812/HT814 indicates new voice mail messages using Phone LEDs and Stutter Tone.

The Phone LEDs on HT812/HT814 will start blinking slowly when a new voice mail message is available on corresponding account.



A stutter tone will be played at first few seconds followed by dial tone when picking up the handset.

Note: New VM messages can be also indicated by LED blink, screen display, etc... if they are supported on connected analog phones.

Accessing VM

To retrieve the new voice mail messages received, please refer to following steps:

1. Pick up the handset of the connected phone (stutter tone will be played).
2. Press *** (press the star key three times) to access the IVR menu and wait until you hear “Enter the menu option “.
3. Press 86 and enter your configured password (if exist) to access your voice mail menu.

Flash Digit Control

If the option “Flash Digit Control” is enabled on web UI, call operations will require different steps as follows:

- **Call Hold:**

Assume that the call is established between phone A and B.

The phone A received a call from C, then it held B to answer C.

Press the “Flash + 1” to hang up the current call (A – C) and resume call on hold (B).

Or press “Flash + 2” to hold current call (A – C) and resume call on hold (B).

- **Attended transfer:**

Assume that the call is established between phone A and B. The phone A wants to attend transfer phone B to phone C:

1. On the phone A presses FLASH to hear the dial tone.
2. Phone A dials the phone C’s number followed by # (or wait for 4 seconds).
3. If phone C answers the call, phones A and C are in conversation. Then A can press “Flash + 4” to complete transfer.

- **3-Way Conferencing:**

Assume that the call is established, and phone A and B are in conversation. Phone A(HT801/HT802) wants to bring third phone C into conference:

1. Phone A presses Flash (on the analog phone, or Hook Flash for old model phones) to get a dial tone.
2. Phone A dials C’s number then # (or wait for 4 seconds).
3. When phone C answers the call, then A can press “Flash +3” to bring B, C in the conference.



NAT SETTINGS

If you plan to keep the HT812/HT814 within a private network behind a firewall, we recommend using STUN Server. The following three settings are useful in the STUN Server scenario:

1. STUN Server (under advanced settings webpage) Enter a STUN server IP (or FQDN) that you may have or look up a free public STUN Server on the internet and enter it on this field. If using Public IP, keep this field blank.
2. Use Random SIP/RTP Ports (under advanced settings webpage) This setting depends on your network settings. Generally, if you have multiple IP devices under the same network, it should be set to Yes. If using a public IP address, set this parameter to No.
3. NAT traversal (under the FXS web page) Set this to Yes when gateway is behind firewall on a private network.



DTMF Methods

The HT812/HT814 support the following DTMF mode:

- DTMF in-audio
- DTMF via RTP (RFC2833)
- DTMF via SIP INFO

Set priority of DTMF methods according to your preference. This setting should be based on your server DTMF setting.

Preferred Vocoder (Codec)

The HT812/HT814 support following voice codecs. On Profile pages, choose the order of your favorite codecs:

- PCMU/A (or G711μ/a)
- G729 A/B
- G723.1
- G726
- iLBC
- OPUS
- G722



UPGRADING AND PROVISIONING

The HT812/HT814 can be upgraded via FTP/FTPS/TFTP/HTTP/HTTPS by configuring the URL/IP Address for the FTP/FTPS/TFTP/HTTP/HTTPS server and selecting a download method. Configure a valid URL for TFTP or FTP/FTPS or HTTP/HTTPS (default is HTTPS); the server name can be FQDN or IP address.

Examples of valid URLs:


firmware.grandstream.com

fw.ipvideotalk.com/gs

Firmware Upgrade procedure

Please follow below steps in order to upgrade the firmware version of your HT812/HT814:

1. Access your HT812/HT814 UI by entering its IP address in your favorite browser.
2. Enter your admin password (default: admin).
3. Press **Login** to access your settings.
4. Go to **Advanced Settings → Firmware Upgrade and Provisioning** page, and enter the IP address or the FQDN for the upgrade server in **"Firmware Server Path"** field and choose to upgrade via **TFTP , FTP/FTPS or HTTP/HTTPS**.
5. Make sure to check **"Always Check for New Firmware"**.
6. Update the change by clicking the **"Apply"** button at the bottom of the page. Then **"Reboot"** or power cycle the HT812/HT814 to update the new firmware.

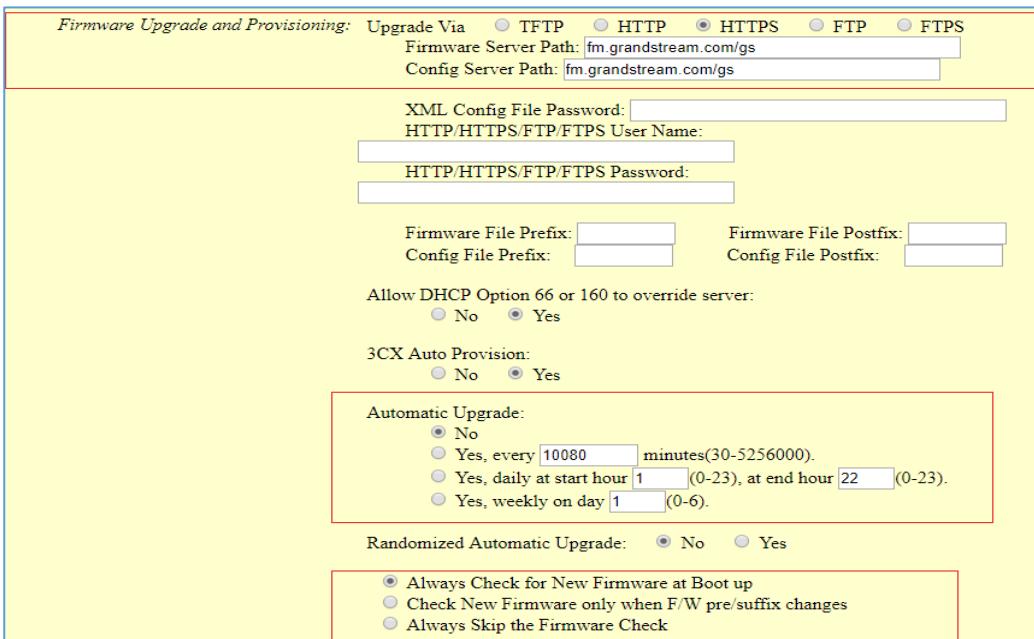

Firmware Upgrade and Provisioning: Upgrade Via TFTP HTTP HTTPS FTP FTPS
 Firmware Server Path: fm.grandstream.com/gs
 Config Server Path: fm.grandstream.com/gs

XML Config File Password:
 HTTP/HTTPS/FTP/FTPS User Name:
 HTTP/HTTPS/FTP/FTPS Password:

Firmware File Prefix: Firmware File Postfix:
 Config File Prefix: Config File Postfix:

Allow DHCP Option 66 or 160 to override server:
 No Yes

3CX Auto Provision:
 No Yes

Automatic Upgrade:
 No
 Yes, every minutes(30-5256000).
 Yes, daily at start hour (0-23), at end hour (0-23).
 Yes, weekly on day (0-6).

Randomized Automatic Upgrade: No Yes

Always Check for New Firmware at Boot up
 Check New Firmware only when F/W pre/suffix changes
 Always Skip the Firmware Check

Figure 14: Firmware Upgrade Page



Upgrading via Local Directory

1. Download the firmware file from Grandstream web site
2. Unzip it and copy the file in to a folder in your PC
3. From the HT812/HT814 web interface (Advanced Settings page) you can browse your hard drive and select the folder you previously saved the file (HT81xfw.bin)
4. Click "Upload Firmware" and wait few minutes until the new program is loaded.

Note: Always check the status page to see that the program version has changed.

Upgrading via Local TFTP/HTTP/HTTPS/FTP/FTPS Servers

For users that would like to use remote upgrading without a local TFTP/HTTP/HTTPS/FTP/FTPS server, Grandstream offers a NAT-friendly HTTP server. This enables users to download the latest software upgrades for their devices via this server. Please refer to the webpage:
<http://www.grandstream.com/support/firmware>

Alternatively, users can download for example a free TFTP or HTTP server and conduct a local firmware upgrade. A free windows version TFTP server is available for download from:

http://www.solarwinds.com/products/freetools/free_ftpd_server.aspx

<http://ftpd32.jounin.net/>.

Instructions for local firmware upgrade via TFTP:

1. Unzip the firmware files and put all of them in the root directory of the TFTP server.
2. Connect the PC running the TFTP server and the phone to the same LAN segment.
3. Launch the TFTP server and go to the File menu->Configure->Security to change the TFTP server's default setting from "**Receive Only**" to "**Transmit Only**" for the firmware upgrade.
4. Start the TFTP server and configure the TFTP server in the phone's web configuration interface.
5. Configure the Firmware Server Path to the IP address of the PC.
6. Save and Apply the changes and reboot the HT812/HT814.

End users can also choose to download a free HTTP server from <http://httpd.apache.org/> or use Microsoft IIS web server.

Firmware and Configuration File Prefix and Postfix

Firmware Prefix and Postfix allows device to download the firmware name with the matching Prefix and Postfix. This makes it the possible to store all of firmware with different version in one single directory. Similarly, Config File Prefix and Postfix allows device to download the configuration file with the matching Prefix and Postfix. Thus, multiple configuration files for the same device can be stored in one directory.

In addition, when the field "Check New Firmware only when F/W pre/suffix changes" is set to "Yes", the



device will only issue firmware upgrade request if there are changes in the firmware Prefix or Postfix.

Managing Firmware and Configuration File Download

When “Automatic Upgrade” is set “**Yes, every**” the auto check will be done in the minute specified in this field. If set to “**daily at hour (0-23)**”, Service Provider can use P193 (Auto Check Interval) to have the devices do a daily check at the hour set in this field with either Firmware Server or Config Server. If set to “**weekly on day (0-6)**” the auto check will be done on the day specified in this field. This allows the device periodically check if there are any new changes need to be taken on a scheduled time. By defining different intervals in P193 for different devices, Server Provider can spread the Firmware or Configuration File download in minutes to reduce the Firmware or Provisioning Server load at any given time

Configuration File Download

Grandstream SIP Devices can be configured via the Web Interface as well as via a Configuration File (binary or XML) through TFTP or FTP/FTPS or HTTP/HTTPS. The **Config Server Path** is the TFTP or FTP/FTPS or HTTP/HTTPS server path for the configuration file. It needs to be set to a valid URL, either in FQDN or IP address format. The **Config Server Path** can be the same or different from the **Firmware Server Path**.

A configuration parameter is associated with each particular field in the web configuration page. A parameter consists of a Capital letter P and 2 to 3 (Could be extended to 4 in the future) digit numeric numbers. i.e., P2 is associated with the "New Password" in the Web GUI->Maintenance->Web/SSH Access page->Admin Password. For a detailed parameter list, please refer to the corresponding firmware release configuration template.

When the HT812/HT814 boots up or reboots, it will send a request to download a file named "cfgxxxxxxxxxxxx" followed by a configuration XML file named "cfgxxxxxxxxxxxx.xml", where "xxxxxxxxxxxx" is the MAC address of the phone, i.e., "cfg000b820102ab" and "cfg000b820102ab.xml". If the download of "cfgxxxxxxxxxxxx.xml" file is not successful, the provision program will download a generic cfg.xml file. The configuration file name should be in lower case letters.

For more details on XML provisioning, please refer to:

http://www.grandstream.com/sites/default/files/Resources/gs_provisioning_guide.pdf



RESTORE FACTORY DEFAULT SETTINGS

⚠️ Warning:

Restoring the Factory Default Settings will delete all configuration information on the phone. Please backup or print all the settings before you restore to the factory default settings. Grandstream is not responsible for restoring lost parameters and cannot connect your device to your VoIP service provider.

There are three (3) methods for resetting your unit:

Using the Reset Button

To reset default factory settings using the reset button please follow the steps above:

1. Unplug the Ethernet cable.
2. Locate the reset hole on the back panel of your HT812/HT814.
3. Insert a pin in this hole, and press for about 7 seconds.
4. Take out the pin. All unit settings are restored to factory settings

Using the IVR Command

Reset default factory settings using the IVR prompt:

1. Dial “****” for voice prompt.
2. Enter “99” and wait for “reset” voice prompt.
3. Enter the encoded MAC address (Look below on how to encode MAC address).
4. Wait 15 seconds and device will automatically reboot and restore factory settings.

Encode the MAC Address

1. Locate the MAC address of the device. It is the 12-digit HEX number on the bottom of the unit.
2. Key in the MAC address. Use the following mapping:

Table 7: MAC Address Key Mapping

Key	Mapping
0-9	0-9
A	22 (press the “2” key twice, “A” will show on the LCD)
B	222
C	2222



D	33 (press the “3” key twice, “D” will show on the LCD)
E	333
F	3333

For example: if the MAC address is 000b8200e395, it should be keyed in as “0002228200333395”



EXPERIENCING HT812/HT814

Please visit our website: <http://www.grandstream.com> to receive the most up-to-date updates on firmware releases, additional features, FAQs, documentation and news on new products.

We encourage you to browse our [product related documentation](#), [FAQs](#) and [User and Developer Forum](#) for answers to your general questions. If you have purchased our products through a Grandstream Certified Partner or Reseller, please contact them directly for immediate support.

Our technical support staff is trained and ready to answer all of your questions. Contact a technical support member or [submit a trouble ticket online](#) to receive in-depth support.

Thank you again for purchasing Grandstream analogue telephone adapter, it will be sure to bring convenience to both your business and personal life.

