



KITCHEN MAMA

Yes You **CAN**

Electric Can Opener

USE AND CARE MANUAL



 
Your automatic hands-free can opener for hassle-free cooking.

Kitchen Mama Hands-Free Electric Can Opener

**SOLVE ALL YOUR CAN OPENING PROBLEMS WITH JUST A PUSH OF A BUTTON.
YES, YOU CAN!**

- Incredibly simple and easy to use with a touch of a button.
- Cuts around the can, leaving you no sharp edges.
- Built with a small magnet to keep the lid in place.
- No mess and contamination from other cans.
- Safe for kids, easy on grandmas!

PARTS

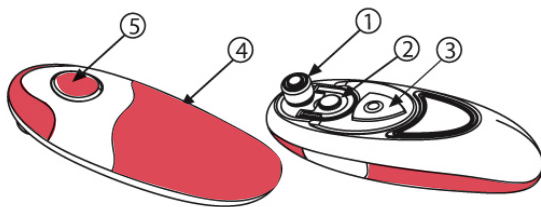

1 Blade

 
2 Metal gear

3 Magnet

4 Battery Compartment

5 ON/OFF Button


HOW TO USE 3 Easy Steps

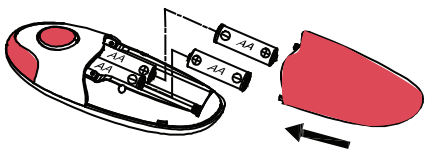

STEP 1: Put batteries on the battery compartment. Make sure that they are in the right polarity and that the cover is locked in place.



 STEP 2: Put the can opener on top of the can making sure the blade and metal gear is between the edge.

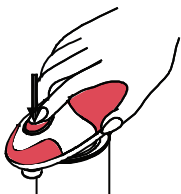

STEP 3: Push the button and let it rotate around the can on its own. Once finished rotating around the can, push the button again to stop and latch off the edge. Remove the can opener and lift the lid.

CARE INSTRUCTIONS

Remove the battery first and simply wipe clean with a damp towel.
DO NOT submerge on water, wash under running water, or wash in dishwasher.

TROUBLESHOOTING

1. The can opener is not working. What do I do?

Check the battery compartment. Make sure the batteries are in the right polarity and that the cover is securely in place

2. Why is it rotating so slowly? It looks like it's struggling.

The batteries might be drained already. Replace them and try again.

3. Why doesn't it latch off the edge once it's done?

First, don't forcefully remove the can opener. Restart it by taking off the batteries in that position. Put them back on, including the lid and push the button again.

4. Why can't it open the can?

Make sure that it is in the right position on the can. Check the can for any dents or bends on the edges. If there are no problems with the can, restart the can opener.*
not to be used on cans with curved body. Such as coke & beer.

5. Why can't the small magnet keep the lid in place?

Some canned food suck in the lid due to moisture. You can manually lift the lid up to open.

WARNING

- Read all instructions carefully before use.
- Use AA alkaline batteries only.
- Don't use old and new batteries together. Do mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadium) batteries.
- Make sure the batteries are inserted in the correct polarity; if not, it won't operate or may cause battery leakage.
- Do not dispose batteries on fire, they might explode. If disposing batteries in large amounts, contact your trash disposal company or municipal waste disposal department for instructions.
- Remove the batteries when not in use for an extended period of time.
- This product is safe for children to use but it is not a toy.
- Use under adult supervision.